


Push-In Fitting Type Fixed Orifice Joint Fixed Orifice Joint Series

- *Fix Air Flow Rate.*
- *Lower Price than Throttle (Needle) Valve.*
- *Installable in Small Space.*
- *18 Types of Orifice Bore.*

Model Designation (Example)

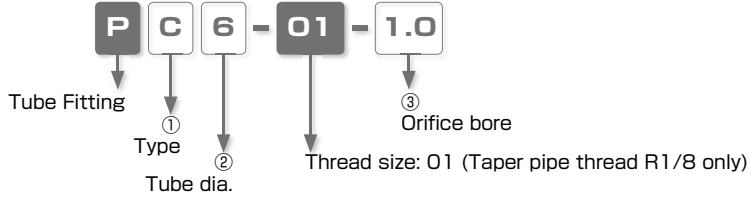

① Type

| Code | Type | Code | Type |
|------|----------|------|-------|
| C | Straight | L | Elbow |

② Tube dia.

| Tube dia. | mm size | | |
|-----------|---------|----|----|
| Code | 4 | 6 | 8 |
| Size (mm) | ø4 | ø6 | ø8 |


③ Orifice bore

| | | | | | | | | | |
|---------------------------|------|-----|------|------|------|------|-----|-----|-----|
| Code(Orifice bore(mm)) | 0.3 | 0.4 | 0.5 | 0.6 | 0.7 | 0.8 | 0.9 | 1.0 | 1.1 |
| Eff. A (mm ²) | 0.05 | 0.1 | 0.15 | 0.2 | 0.25 | 0.35 | 0.4 | 0.5 | 0.7 |
| Code(Orifice bore(mm)) | 1.2 | 1.3 | 1.4 | 1.5 | 1.6 | 1.7 | 1.8 | 1.9 | 2.0 |
| Eff. A (mm ²) | 0.85 | 1.0 | 1.15 | 1.45 | 1.65 | 1.85 | 2.1 | 2.3 | 2.5 |

Specifications

| | |
|-------------------------|---------------------|
| Fluid medium | Air |
| Max. operating pressure | 1.0MPa |
| Max. vacuum | -100kPa |
| Operating temp. range | 0~60℃ (No freezing) |

Construction (Elbow: PL)

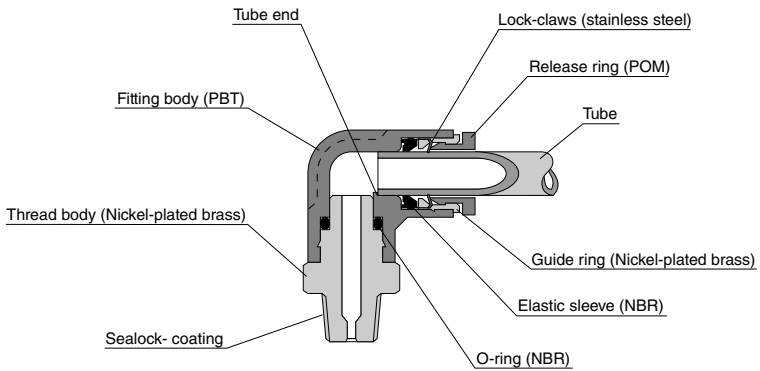

CONTROLLER
 VALVE
 TUBE

MAKE-TO-ORDER
 PRODUCTS

Before using PISCO products, be sure to read "Safety Instructions" and "Safety Instruction Manual" on page 23 to 27 and "Common Safety Instructions for Controllers" on page 367 to 368.

Caution

1. Before using the product, be sure to check the orifice bore marked on the hexagonal-column. The use of the product with wrong orifice bore will changes the speed of actuator.
2. In case an accuracy of flow rate control is required, select the best Fixed Orifice Joint by actual measurements because the flow rate may vary according to a slight dimensional difference of the orifice bore by piece-to-piece, etc.


Standard Size List

Connection: Thread ⇔ Tube

| Type | Page | Thread size | Tube O.D. (mm) | | |
|-------------|-------|-------------|----------------|---|---|
| | | | 4 | 6 | 8 |
| PC Straight | P.503 | R1/8 | ● | ● | ● |

| Type | Page | Thread size | Tube O.D. (mm) | | |
|----------|-------|-------------|----------------|---|---|
| | | | 4 | 6 | 8 |
| PL Elbow | P.503 | R1/8 | ● | ● | ● |

Flow characteristic

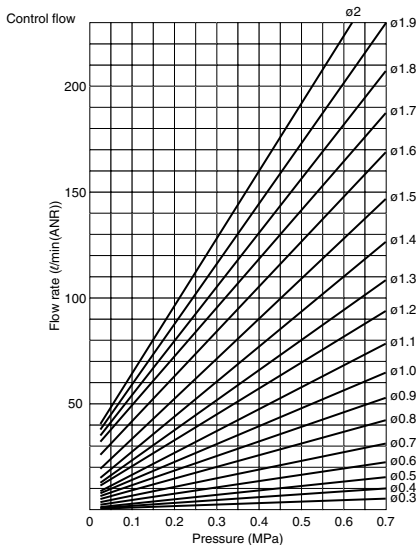


How to insert and disconnect

1. How to insert and disconnect tubes

① Tube insertion

Insert a tube into Push-In Fitting up to the tube end. Lock-claws bite the tube and fix it automatically, then the elastic sleeve seals around the tube.


Refer to "2. Instructions for Tube Insertion" under "Common Safety Instructions for Fittings" .

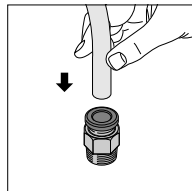

② Tube disconnection

The tube is disconnected by pushing release-ring to release Lock-claws.

Make sure to stop air supply before the tube disconnection.

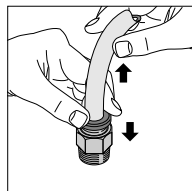


2. How to tighten thread

① Tightening thread

Use a spanner to tighten a hexagonal-column.

Refer to "Table: Recommended tightening torque" under "2. Instructions for Installing Controllers" in "Common Safety Instructions for Controllers" .

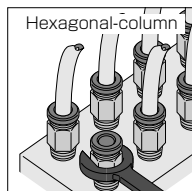

Applicable Tube and Related Products

Polyurethane Tube.....P.596

Nylon Tube.....P.608

Controller Series

Fixed Orifice Joint Series

FITTING
CONTROLLER

PC Straight

RoHS compliant

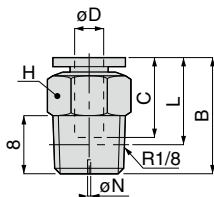


Chart
P.501

OP.
P.754

Unit : mm

| Model code | Tube O.D. ϕD | B | L | Tube end C | Hex. H | Weight (g) | CAD file name |
|------------|-----------------------|------|------|---------------|-----------|---------------|------------------|
| PC4-01-□ | 4 | 21 | 17 | 14.9 | 10 | 8.3 | - |
| PC6-01-□ | 6 | 22.6 | 18.6 | 17 | 12 | 9.5 | |
| PC8-01-□ | 8 | 27.9 | 23.9 | 18.2 | 14 | 17 | |

※ . "L" is a reference value for height dimension after tightening thread.

| Code(Orifice bore) ϕN (mm) | 0.3 | 0.4 | 0.5 | 0.6 | 0.7 | 0.8 | 0.9 | 1.0 | 1.1 | 1.2 | 1.3 | 1.4 | 1.5 | 1.6 | 1.7 | 1.8 | 1.9 | 2.0 |
|-------------------------------------|------|-----|------|-----|------|------|-----|-----|-----|------|-----|------|------|------|------|-----|-----|-----|
| Eff. A (mm ²) | 0.05 | 0.1 | 0.15 | 0.2 | 0.25 | 0.35 | 0.4 | 0.5 | 0.7 | 0.85 | 1.0 | 1.15 | 1.45 | 1.65 | 1.85 | 2.1 | 2.3 | 2.5 |

503

PL Elbow

RoHS compliant

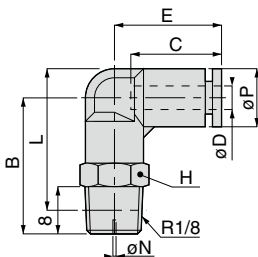


Chart
P.501

OP.
P.754

Unit : mm

| Model code | Tube O.D. ϕD | B | L | ϕP | Tube end C | E | Hex. H | Weight (g) | CAD file name |
|------------|-----------------------|------|------|----------|---------------|------|-----------|---------------|------------------|
| PL4-01-□ | 4 | 23.3 | 24.3 | 10 | 14.9 | 18 | 10 | 12 | - |
| PL6-01-□ | 6 | 25 | 27.3 | 12.5 | 16.8 | 19.8 | 12 | 15 | |
| PL8-01-□ | 8 | 28 | 31.3 | 14.5 | 18.2 | 22.7 | 14 | 19 | |

※ . "L" is a reference value for height dimension after tightening thread.

| Code(Orifice bore) ϕN (mm) | 0.3 | 0.4 | 0.5 | 0.6 | 0.7 | 0.8 | 0.9 | 1.0 | 1.1 | 1.2 | 1.3 | 1.4 | 1.5 | 1.6 | 1.7 | 1.8 | 1.9 | 2.0 |
|-------------------------------------|------|-----|------|-----|------|------|-----|-----|-----|------|-----|------|------|------|------|-----|-----|-----|
| Eff. A (mm ²) | 0.05 | 0.1 | 0.15 | 0.2 | 0.25 | 0.35 | 0.4 | 0.5 | 0.7 | 0.85 | 1.0 | 1.15 | 1.45 | 1.65 | 1.85 | 2.1 | 2.3 | 2.5 |



SAFETY Instructions

This safety instructions aim to prevent personal injury and damage to properties by requiring proper use of PISCO products.

Be certain to follow ISO 4414 and JIS B 8370

ISO 4414 : Pneumatic fluid power...Recommendations for the application of equipment to transmission and control systems.

JIS B 8370 : General rules and safety requirements for systems and their components.

This safety instructions is classified into "Danger", "Warning" and "Caution" depending on the degree of danger or damages caused by improper use of PISCO products.



Danger

Hazardous conditions. It can cause death or serious personal injury.



Warning

Hazardous conditions depending on usages. Improper use of PISCO products can cause death or serious personal injury.



Caution

Hazardous conditions depending on usages. Improper use of PISCO products can cause personal injury or damages to properties.



Warning

1. Selection of pneumatic products

- ① A user who is a pneumatic system designer or has sufficient experience and technical expertise should select PISCO products.
- ② Due to wide variety of operating conditions and applications for PISCO products, carry out the analysis and evaluation on PISCO products. The pneumatic system designer is solely responsible for assuring that the user's requirements are met and that the application presents no health or safety hazards. All designers are required to fully understand the specifications of PISCO products and constitute all systems based on the latest catalog or information, considering any malfunctions.

2. Handle the pneumatic equipment with enough knowledge and experience

- ① Improper use of compressed air is dangerous. Assembly, operation and maintenance of machines using pneumatic equipment should be conducted by a person with enough knowledge and experience.

3. Do not operate machine / equipment or remove pneumatic equipment until safety is confirmed.

- ① Make sure that preventive measures against falling work-pieces or sudden movements of machine are completed before inspection or maintenance of these machine.
- ② Make sure the above preventive measures are completed. A compressed air supply and the power supply to the machine must be off, and also the compressed air in the systems must be exhausted.
- ③ Restart the machines with care after ensuring to take all preventive measures against sudden movements.

Disclaimer

1. PISCO does not take any responsibility for any incidental or indirect loss, such as production line stop, interruption of business, loss of benefits, personal injury, etc., caused by any failure on use or application of PISCO products.
2. PISCO does not take any responsibility for any loss caused by natural disasters, fires not related to PISCO products, acts by third parties, and intentional or accidental damages of PISCO products due to incorrect usage.
3. PISCO does not take any responsibility for any loss caused by improper usage of PISCO products such as exceeding the specification limit or not following the usage the published instructions and catalog allow.
4. PISCO does not take any responsibility for any loss caused by remodeling of PISCO products, or by combinational use with non-PISCO products and other software systems.
5. The damages caused by the defect of Pisco products shall be covered but limited to the full amount of the PISCO products paid by the customer.



SAFETY INSTRUCTION MANUAL

PISCO products are designed and manufactured for use in general industrial machines. Be sure to read and follow the instructions below.

Danger

1. Do not use PISCO products for the following applications.
 - ① Equipment used for maintaining / handling human life and body.
 - ② Equipment used for moving / transporting human.
 - ③ Equipment specifically used for safety purposes.

Warning

1. Do not use PISCO products under the following conditions.
 - ① Beyond the specifications or conditions stated in the catalog, or the instructions.
 - ② Under the direct sunlight or outdoors.
 - ③ Excessive vibrations and impacts.
 - ④ Exposure / adhere to corrosive gas, inflammable gas, chemicals, seawater, water and vapor. *
 - * Some products can be used under the condition above(④), refer to the details of specification and condition of each product.
2. Do not disassemble or modify PISCO products, which affect the performance, function, and basic structure of the product.
3. Turn off the power supply, stop the air supply to PISCO products, and make sure there is no residual air pressure in the pipes before maintenance and inspection.
4. Do not touch the release-ring of push-in fitting when there is a working pressure. The lock may be released by the physical contact, and tube may fly out or slip out.
5. Frequent switchover of compressed air may generate heat, and there is a risk of causing burn injury.
6. Avoid any load on PISCO products, such as a tensile strength, twisting and bending. Otherwise, there is a risk of causing damage to the products.
7. As for applications where threads or tubes swing / rotate, use Rotary Joints, High Rotary Joints or Multi-Circuit Rotary Block only. The other PISCO products can be damaged in these applications.
8. Use only Die Temperature Control Fitting Series, Tube Fitting Stainless SUS316 Series, Tube Fitting Stainless SUS316 Compression Fitting Series or Tube Fitting Brass Series under the condition of over 60°C (140° F) water or thermal oil. Other PISCO products can be damaged by heat and hydrolysis under the condition above.
9. As for the condition required to dissipate static electricity or provide an antistatic performance, use EG series fitting and antistatic products only, and do not use other PISCO products. There is a risk that static electricity can cause system defects or failures.
10. Use only Fittings with a characteristic of spatter-proof such as Anti-spatter or Brass series in a place where flame and weld spatter is produced. There is a risk of causing fire by sparks.
11. Turn off the power supply to PISCO products, and make sure there is no residual air pressure in the pipes and equipment before maintenance. Follow the instructions below in order to ensure safety.
 - ① Make sure the safety of all systems related to PISCO products before maintenance.
 - ② Restart of operation after maintenance shall be proceeded with care after ensuring safety of the system by preventive measures against unexpected movements of machines and devices where pneumatic equipment is used.
 - ③ Keep enough space for maintenance when designing a circuit.
12. Take safety measures such as providing a protection cover if there is a risk of causing damages or fires on machine / facilities by a fluid leakage.

⚠ Caution


1. Remove dusts or drain before piping. They may get into the peripheral machine / facilities and cause malfunction.
2. When inserting an ultra-soft tube into push-in fitting, make sure to place an Insert Ring into the tube edge. There is a risk of causing the escape of tube and a fluid leakage without using an Insert Ring.
3. The product incorporating NBR as seal rubber material has a risk of malfunction caused by ozone crack. Ozone exists in high concentrations in static elimination air, clean-room, and near the high-voltage motors, etc. As a countermeasure, material change from NBR to HNBR or FKM is necessary. Consult with PISCO for more information.
4. Special option "Oil-free" products may cause a very small amount of a fluid leakage. When a fluid medium is liquid or the products are required to be used in harsh environments, contact us for further information.
5. In case of using non-PISCO brand tubes, make sure the tolerance of the outer tube diameter is within the limits of Table 1.

● Table 1. Tube O.D. Tolerance

| mm size | Nylon tube | Polyurethane tube | inch size | Nylon tube | Polyurethane tube |
|---------|------------|-------------------|-----------|------------|-------------------|
| ø1.8mm | — | ± 0.05mm | ø1/8 | ± 0.1mm | ± 0.15mm |
| ø3mm | — | ± 0.15mm | ø5/32 | ± 0.1mm | ± 0.15mm |
| ø4mm | ± 0.1mm | ± 0.15mm | ø3/16 | ± 0.1mm | ± 0.15mm |
| ø6mm | ± 0.1mm | ± 0.15mm | ø1/4 | ± 0.1mm | ± 0.15mm |
| ø8mm | ± 0.1mm | ± 0.15mm | ø5/16 | ± 0.1mm | ± 0.15mm |
| ø10mm | ± 0.1mm | ± 0.15mm | ø3/8 | ± 0.1mm | ± 0.15mm |
| ø12mm | ± 0.1mm | ± 0.15mm | ø1/2 | ± 0.1mm | ± 0.15mm |
| ø16mm | ± 0.1mm | ± 0.15mm | ø5/8 | ± 0.1mm | ± 0.15mm |

6. Instructions for Tube Insertion

- ① Make sure that the cut end surface of the tube is at right angle without a scratch on the surface and deformations.
- ② When inserting a tube, the tube needs to be inserted fully into the push-in fitting until the tubing edge touches the tube end of the fitting as shown in the figure below. Otherwise, there is a risk of leakage.

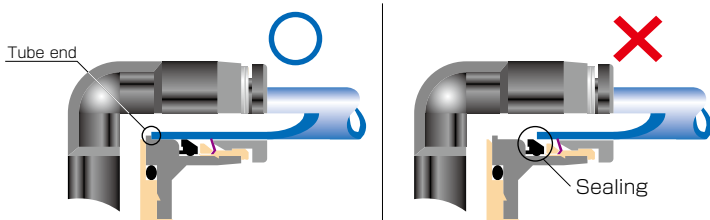

Tube is not fully inserted up to tube end.

- ③ After inserting the tube, make sure it is inserted properly and not to be disconnected by pulling it moderately.
- ※ When inserting tubes, Lock-claws may be hardly visible in the hole, observed from the front face of the release-ring. But it does not mean the tube will surely escape. Major causes of the tube escape are the followings;
- ① Shear drop of the lock-claws edge
 - ② The problem of tube diameter (usually small)
- Therefore, follow the above instructions from ① to ③, even lock-claws is hardly visible.

7. Instructions for Tube Disconnection

- ① Make sure there is no air pressure inside of the tube, before disconnecting it.
- ② Push the release-ring of the push-in fitting evenly and deeply enough to pull out the tube toward oneself. By insufficient pushing of the release-ring, the tube may not be pulled out or damaged by scratch, and tube shavings may remain inside of the fitting, which may cause the leakage later.

8. Instructions for Installing a fitting

- ① When installing a fitting, use proper tools to tighten a hexagonal-column or an inner hexagonal socket. When inserting a hex key into the inner hexagonal socket of the fitting, be careful so that the tool does not touch lock-claws. The deformation of lock-claws may result in a poor performance of systems or an escape of the tube.
- ② Refer to Table 2 which shows the recommended tightening torque. Do not exceed these limits to tighten a thread. Excessive tightening may break the thread part or deform the gasket and cause a fluid leakage. Tightening thread with tightening torque lower than these limits may cause a loosened thread or a fluid leakage.
- ③ Adjust the tube direction while tightening thread within these limits, since some PISCO products are not rotatable after the installation.

● Table 2: Recommended tightening torque / Sealock color / Gasket materials

| Thread type | Thread size | Tightening torque | Sealock color | Gasket materials |
|----------------------------|-------------|-------------------|---------------|------------------|
| Metric thread | M3 × 0.5 | 0.7N·m | — | SUS304 NBR |
| | M5 × 0.8 | 1.0 ~ 1.5N·m | | |
| | M6 × 1 | 2 ~ 2.7N·m | | |
| | M3 × 0.5 | 0.5 ~ 0.6N·m | | POM |
| | M5 × 0.8 | 1 ~ 1.5N·m | | |
| | M6 × 0.75 | 0.8 ~ 1N·m | | |
| Taper pipe thread | M8 × 0.75 | 1 ~ 2N·m | White | — |
| | R1/8 | 7 ~ 9N·m | | |
| | R1/4 | 12 ~ 14N·m | | |
| | R3/8 | 22 ~ 24N·m | | |
| Unified thread | R1/2 | 28 ~ 30N·m | — | SUS304, NBR |
| | No.10-32UNF | 1.0 ~ 1.5N·m | | |
| National pipe thread taper | 1/16-27NPT | 7 ~ 9N·m | White | — |
| | 1/8-27NPT | 7 ~ 9N·m | | |
| | 1/4-18NPT | 12 ~ 14N·m | | |
| | 3/8-18NPT | 22 ~ 24N·m | | |
| | 1/2-14NPT | 28 ~ 30N·m | | |

※ These values may differ for some products. Refer to each specification as well.

9. Instructions for removing a fitting

- ① When removing a fitting, use proper tools to loosen a hexagonal-column or an inner hex bolt.
- ② Remove the sealant stuck on the mating equipment. The remained sealant may get into the peripheral equipment and cause malfunctions.

10. Arrange piping avoiding any load on fittings and tubes such as twist, tensile, moment load, shaking and physical impact. These may cause damages to fittings, tube deformations, bursting and the escape of tubes.

Common Safety Instructions for Controllers

Before selecting or using PISCO products, read the following instructions. Read the detailed instructions for individual series as well as the instructions below.

Warning

1. Some products have an air direction to control. Make sure to distinguish the direction by marking on the products. Installing the product with the wrong direction may cause personal injury or property damage.
2. Avoid any load on PISCO products such as a tensile strength, twisting, bending, dropping and excessive impacts. These may cause damage to the products.
3. Locknut needs to be tightened by hand. Do not use any tool. Using tools to tighten the locknut may cause damage to the products. Also, inadequate tightening may loosen the locknut and the initial setting can be changed.
4. Use clean air to supply. Dusts and sludge may result in the change of the initial setting.

⚠ Caution

1. Refer to “Common Safety Instructions for Fittings” for the safety instructions for fitting part.
2. Instructions for Installing Controllers
 - ① Use proper tools to tighten a hexagonal-column or a knurling, when installing the controller.
 - ② Refer to the following table which shows the recommended tightening torque to tighten thread. Excessive tightening may break the thread part or deform the gasket to cause a fluid leakage. Tightening thread with the tightening torque lower than these limits may cause a loosened thread or a fluid leakage.

● Table: Recommended tightening torque (hexagonal-column)

| Thread type | Thread size | Tightening torque |
|----------------------------|-------------|--------------------------------------|
| Metric thread | M3 × 0.5 | 0.7Nm |
| | M5 × 0.8 | 1 ~ 1.5Nm |
| | M6 × 1 | 2 ~ 2.7Nm |
| Taper pipe thread | R1/8 | 7 ~ 9Nm |
| | R1/4 | 12 ~ 14Nm |
| | R3/8 | 22 ~ 24Nm |
| | R1/2 | 28 ~ 30Nm |
| Unified thread | No.10-32UNF | 1.5 ~ 1.9Nm |
| National pipe thread taper | 1/16-28NPT | 7 ~ 9Nm |
| | 1/8-27NPT | 7 ~ 9Nm |
| | 1/4-18NPT | 12 ~ 14Nm |
| | 3/8-18NPT | 22 ~ 24Nm |
| | 1/2-14NPT | 28 ~ 30Nm |
| Parallel pipe thread | G3/8 | After hand tightening 1/2~1 turns |
| | G1/2 | |

(knurling)


| Thread type | Thread size | Tightening torque |
|----------------------|-------------|---------------------------------------|
| Metric thread | M5 × 0.8 | 1/6 turns after hand tightening |
| | M6 × 1 | |
| | M10 × 1 | |
| Parallel pipe thread | G3/8 | 1/2~1 turns after hand tightening |
| | G1/2 | |

3. Instructions for removing Controller

- ① When removing controllers, use proper tools to loosen a hexagonal-column or a knurling.
- ② Remove the sealant stuck on the mating equipment. The remained sealant may get into the peripheral equipment and cause malfunctions.

4. Fixed Orifice Joint Series and Speed Controller Constant Flow Series have deviation of flow rate. Contact us, in case a very accurate amount of flow rate is required.

5. If PISCO products generate heat by an adiabatic compression, total temperature including the heat from the product must be controlled within the range of the specification.

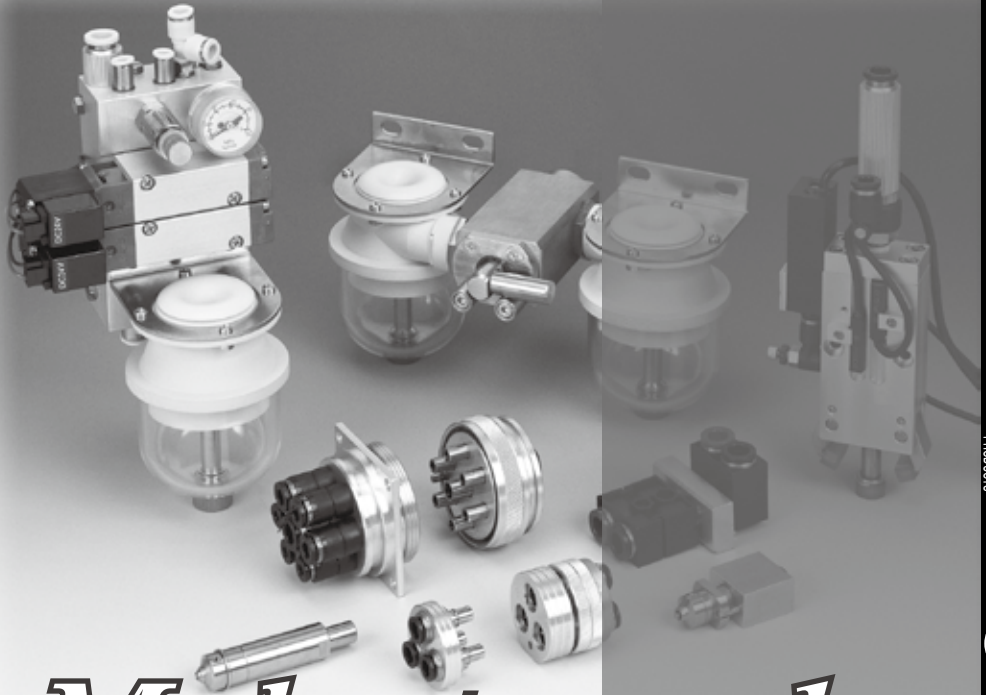

Make-to-order products

PISCO offers make-to-order products to support customer's various requirements such as special specifications, and special appearances.

Special Options

■ Characteristics

● *Color option*

Light-gray color option for resin body and release-ring.

● *Seal rubber material option*

Seal Rubber Selection: FKM or EPDM.

● *Oil-free option*

Suitable for Oil-free Environment.

● *Release-ring color option*


Changeable to Red Color

● *Non-purple option*

Suppress CU ion and F ion.

※ Note: With this option, Check Valve and Stop Fitting, etc. do not have marking on the brass parts. Be careful when piping.

Model Designation (Example)

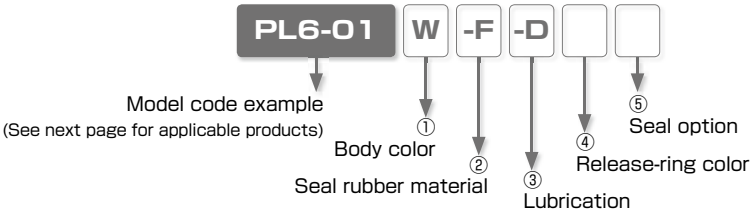

① Body color

| Code | W | No code |
|------------|------------|----------------|
| Body color | Light-gray | Standard color |

※ . W: Release-ring color is light-gray

② Seal rubber material

| Code | -F | -E | No code |
|----------|-----|-----------------|----------------------|
| Material | FKM | EPDM (Oil-free) | Standard seal rubber |

※ 1. FKM: Release-ring color is brown. Non-purple option is not available with FKM option.

※ 2. EPDM: All oil-free. Release-ring color is yellow.

※ 3. EPDM: Not available for Thread size M3, M6 and Fittings with Inch sized Tube dia.

③ Lubrication

| Code | -D | No code |
|--------|----------|----------------------|
| Option | Oil-free | Standard lubrication |

※ 1. Oil-free : Release-ring color is yellow.

※ 2. The products with oil-free option are assembled without intentional use of lubrication through its production process. It may cause problems such as degradation of airtightness and increase of friction.

④ Release-ring color

| Code | -R | No code |
|-------|-----|----------------|
| Color | Red | Standard color |

⑤ Seal option (Taper pipe thread only)

| Code | -P | No code |
|--------|------------|----------|
| Option | Non-purple | Standard |

※ 1. Non-purple option is not available with seal rubber FKM

※ . See next page for "Reference Chart of Special Option" .

※ . Contact the nearest sales office for the price.

Reference Chart of Special Option

○ : Available, × : Not available

| Series | Standard specification | | | | | | Special specification | | | | | |
|--|---------------------------------|------------|--------------------|----------------------|-----------------------|----------------|-----------------------|----------------------|------------------|--------------------|-----------------|------------------|
| | Body Color and Packaging Option | Body color | Release-ring color | Seal rubber material | Lubrication | Seal option | ① | ② | ③ | ④ | ⑤ | |
| | | | | | | | Body color | Seal rubber material | Lubrication | Release-ring color | Seal option | |
| | | | | | | | W* ¹ | -F* ² | -E* ³ | -D* ⁴ | -R | -P* ² |
| Light-gray | FKM | EPDM | Oil-free | Red | Non-purple | | | | | | | |
| Tube Fitting Standard Series | — | Black | Black | NBR | Turbin oil | With seal coat | — | ○* ⁵ | ○ | ○ | ○ | ○ |
| | Light-gray | Light-gray | Light-gray | | | | Std. option | ○ | ○ | ○ | × | ○ |
| | Clean-room pkg | Light-gray | Light-blue | | Fluorochemical grease | — | ○ | ○* ⁶ | ○* ⁶ | × | × | |
| | Light-gray + Clean-room pkg | Light-gray | Light-gray | | Std. option | ○ | ○ | ○ | × | × | | |
| Tube Fitting Mini Series | — | Black | Black | NBR | Turbin oil | With seal coat | — | ○* ⁵ | ○ | ○ | ○ | ○ |
| | Light-gray | Light-gray | Light-gray | | | | Std. option | ○ | ○ | ○ | × | ○ |
| | Clean-room pkg | Light-gray | Light-blue | | Fluorochemical grease | — | ○ | ○* ⁶ | ○* ⁶ | × | × | |
| | Light-gray + Clean-room pkg | Light-gray | Light-gray | | Std. option | ○ | ○ | ○ | × | × | | |
| Tube Fitting Stainless SUS304 Series | — | Black | Dark-blue | FKM | Turbin oil | With seal coat | × | Std. spec. | × | ○* ⁷ | × | × |
| Tube Fitting Stainless SUS303 Equivalent Corrosivity Series | — | Black | Dark-blue | HNBR | Turbin oil | With seal coat | ○ | ○ | ○* ⁷ | ○* ⁷ | × | ○ |
| Tube Fitting EG Series | — | Black | Black | NBR | Turbin oil | With seal coat | × | ○ | ○* ⁸ | × | × | ○ |
| Tube Fitting Brass Series | — | — | — | HNBR / FM / NBR | Turbin oil | With seal coat | × | Std. option | ○ | ○ | × | ○ |
| Tube Fitting Long Type | — | — | Black | NBR | Turbin oil | With seal coat | × | ○* ⁵ | ○ | ○ | ○ | ○ |
| Speed Controller Series | — | Black | Black | NBR | Turbin oil | With seal coat | — | ○* ⁵ | × | × | ○ | ○ |
| | Light-gray | Light-gray | Light-gray | | | | Std. option | ○ | × | × | × | ○ |
| | Clean-room pkg | Light-gray | Light-blue | | Fluorochemical grease | — | ○ | × | × | × | × | |
| | Light-gray + Clean-room pkg | Light-gray | Light-gray | | Std. option | ○ | × | × | × | × | | |
| Speed Controller SUS303 Equivalent Corrosivity | — | Black | Dark-blue | HNBR | Turbin oil | With seal coat | ○ | ○ | × | × | × | ○ |
| Throttle (Needle) Valve Standard Series | — | Black | Black | NBR | Turbin oil | With seal coat | — | ○* ⁵ | × | × | ○ | ○ |
| | Light-gray | Light-gray | Light-gray | | | | Std. option | ○ | × | × | × | ○ |
| | Clean-room pkg | Light-gray | Light-blue | | Fluorochemical grease | — | ○ | × | × | × | × | |
| | Light-gray + Clean-room pkg | Light-gray | Light-gray | | Std. option | ○ | × | × | × | × | | |
| Fixed Orifice Joint Series | — | Black | Black | NBR | Turbin oil | With seal coat | ○ | ○ | ○ | ○ | ○* ⁹ | ○ |
| Regulator Series (RVC, RVS, RVU, RVCU, RVUM) | — | Black | Black | NBR | Turbin oil | With seal coat | ○ | × | × | × | ○* ⁹ | ○ |
| Check Valve Series | — | Black | Black | NBR | Turbin oil | With seal coat | ○* ¹⁰ | × | × | × | ○* ⁹ | ○ |
| Check Valve Series (Resin Type) | — | Light-gray | Light-gray | NBR | Turbin oil | With seal coat | Std. option | × | × | × | × | ○ |

※ 1. W: Release-ring color is light-gray

※ 2. Seal option non-purple is not available with seal rubber material FKM

※ 3. EPDM: All oil-free. Release-ring color is yellow. Thread size M3, M6 and Fitting with inch sized Tube dia are not available.

※ 4. Release-ring color: Yellow.

※ 5. Release-ring color: Brown.

※ 6. Release-ring color: Light-blue.

※ 7. Release-ring color: Dark-blue.


※ 8. Release-ring color: Black

※ 9. Release-ring Red is not selectable with body color Light-gray.

※ 10. Not available for CVU4-4, CVU6-6 and CVU8-8.


















※ Contact the nearest sales office for other special specifications.

■ Reference chart of Appearance Color Combination (For Fitting)

| Series | Resin color or Option | Tube dia. | | Seal rubber material | | Lubrication | Release-ring color | |
|--|--|------------|--|---|---|---|---|--|
| | | | | -F FKM | -E EPDM | -D Oil-free | -R Red | |
| Tube Fitting Standard Series Tube Fitting Mini Series | - | mm size |  |  |  |  |  | |
| | | inch size |  |  |  |  |  | |
| | Light-gray | mm size |  |  |  |  |  | |
| | | inch size |  |  |  |  |  | |
| | Clean-room pkg | mm size |  |  |  |  |  | |
| | | inch size |  |  |  |  |  | |
| | Light-gray + Clean-room pkg | mm size |  |  |  |  |  | |
| | | inch size |  |  |  |  |  | |
| | Tube Fitting Stainless SUS304 Series | - | mm size |  | Std. spec. |  |  |  |
| | Tube Fitting Stainless SUS303 Equivalent Corrosivity Series | - | mm size |  |  |  |  |  |
| | | Light-gray | mm size |  |  |  |  |  |

MADE IN JAPAN
PISCO PRODUCTS

Reference chart of Appearance Color Combination (For Controller)

| Series | Resin color or Option | Tube dia. | | Seal rubber material | | Release-ring color |
|--|-----------------------------|-----------|--|--|---|--------------------|
| | | | | -F FKM | -R レッド | |
| Speed Controller Series Throttle (Needle) Valve Standard Series | - | mm size |  |  |  | |
| | | inch size |  |  | | |
| | Light-gray | mm size |  |  | | |
| | | inch size |  |  | | |
| | Clean-room pkg | mm size |  |  | | |
| | | inch size |  |  | | |
| | Light-gray + Clean-room pkg | mm size |  |  | | |
| | | inch size |  |  | | |


※ Contact the nearest sales office for other special specifications.

Space-Saving Options

Characteristics

- Suitable for Installing in Limited Spaces.

Model Designation (Example)

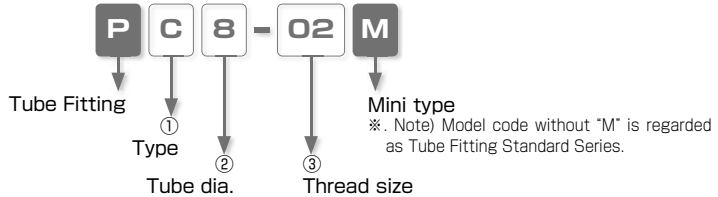

① Type

| Code | Type | Code | Type | Code | Type |
|------|-------|------|------------|------|---------|
| L | Elbow | B | Branch Tee | D | Run Tee |

② Tube dia.

| | | |
|-----------|----|-----|
| Code | 8 | 10 |
| Size (mm) | ø8 | ø10 |

③ Thread size


| Thread size | Taper pipe thread | | |
|-------------|-------------------|------|------|
| Code | 01 | 02 | 03 |
| Size | R1/8 | R1/4 | R3/8 |

Make-to-order products

FITTING
CONTROLLER
VALVE
TUBE

PL
Mini

Elbow

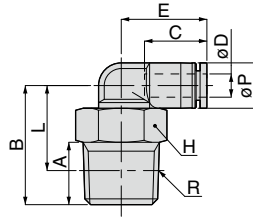

Unit : mm

| Model code | Tube O.D. ϕD | R | A | B | Tube end C | L | Hex. H | E | ϕP | Weight (g) |
|------------|-----------------------|------|----|------|---------------|------|-----------|------|----------|---------------|
| PL8-01M | 8 | R1/8 | 8 | 22.5 | 18.1 | 18.5 | 12 | 21.9 | 15 | 11.9 |
| PL8-02M | | R1/4 | 11 | 25.5 | | 19.5 | 14 | | | 17.5 |
| PL8-03M | | R3/8 | 12 | 26.5 | | 20.2 | 17 | | | 27.9 |
| PL10-02M | 10 | R1/4 | 11 | 27 | 20.2 | 21 | 14 | 24.4 | 18 | 20.9 |
| PL10-03M | | R3/8 | 12 | 28 | | 21.7 | 17 | | | 28.8 |


※ . "L" is a reference value for height dimension after tightening thread.

MAKE-TO-ORDER
PRODUCTS

761

PB
Mini

Branch Tee

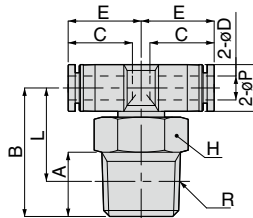


Unit : mm

| Model code | Tube O.D. ϕD | R | A | B | Tube end C | L | Hex. H | E | ϕP | Weight (g) |
|------------|-----------------------|------|----|------|---------------|------|-----------|------|----------|---------------|
| PB8-01M | 8 | R1/8 | 8 | 22.5 | 18.1 | 18.5 | 12 | 21.9 | 15 | 12.8 |
| PB8-02M | | R1/4 | 11 | 25.5 | | 19.5 | 14 | | | 18.2 |
| PB8-03M | | R3/8 | 12 | 26.5 | | 20.2 | 17 | | | 26.1 |
| PB10-02M | 10 | R1/4 | 11 | 27 | 20.2 | 21 | 14 | 24.4 | 18 | 22.3 |
| PB10-03M | | R3/8 | 12 | 28 | | 21.7 | 17 | | | 30.4 |

※ . "L" is a reference value for height dimension after tightening thread.

※ Contact the nearest sales office for other special specifications.

PD Mini Run Tee

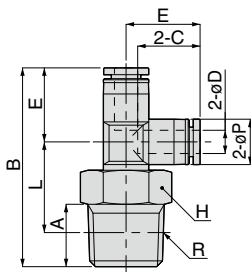

Unit : mm

| Model code | Tube O.D. øD | R | A | B | Tube end C | L | Hex. H | E | øP | Weight (g) |
|------------|-----------------|------|----|------|---------------|------|-----------|------|----|---------------|
| PD8-01M | 8 | R1/8 | 8 | 44.2 | 18.1 | 18.5 | 12 | 21.7 | 15 | 11.9 |
| PD8-02M | | R1/4 | 11 | 47.2 | | 19.5 | 14 | | | 17.5 |
| PD8-03M | | R3/8 | 12 | 48.2 | | 20.2 | 17 | | | 25.3 |
| PD10-02M | 10 | R1/4 | 11 | 52.3 | 20.2 | 21 | 14 | 25.3 | 18 | 21 |
| PD10-03M | | R3/8 | 12 | 53.3 | | 21.7 | 17 | | | 28.8 |

※ .L" is a reference value for height dimension after tightening thread.